


## Description

The AYO WX System can be converted to handle moderate water exposure with the application of a showerproofing kit. After conversion, the WX System is rated to withstand up to 30 seconds inside a top-down decontamination shower.



Dust Sleeve

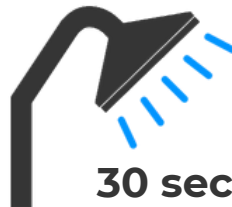

Waterskirt Door

## Important — Read Before Use


- The Showerproofing Kit is exclusive to WX P-Boost System; it is not currently compatible with WX Gas System.
- This Kit can only be used with Long-Life Main Filter (AP047).
- Restrict shower duration to 30 seconds or less to prevent water clogging of the intake.
- The Main Filter and Prefilter are not degraded by exposure to water and can continue to be used after drying.
- Remove both filters from the Filter Unit housing to air dry; assess whether they need to be replaced before refitting.
- Filters need to be replaced if any of the following apply:
  - WX System triggers blocked filter alarm (see manual)
  - Visible puncture or physical damage to filter membrane
  - Filter exceeds rated lifetime since opening

## 1. Fit dust sleeves over orange release rings



## \* Ensure dust sleeve orientation is correct

Tapered skirt seal  
should point back.

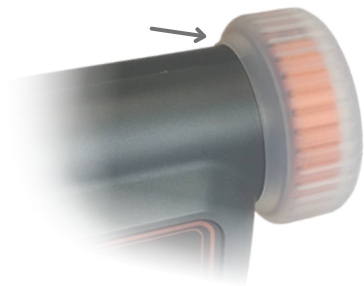

Deformable cushion ring  
should point forward.

## 2. Replace original filter door with waterskirt door

Remove original

- i) sliding door from  
Filter Unit.



Slide provided

- ii) waterskirt door  
onto Filter Unit.



### 3. Steps to operate are same as regular WX



Quick-Connect Sockets are push-fitted onto mask as per normal.